

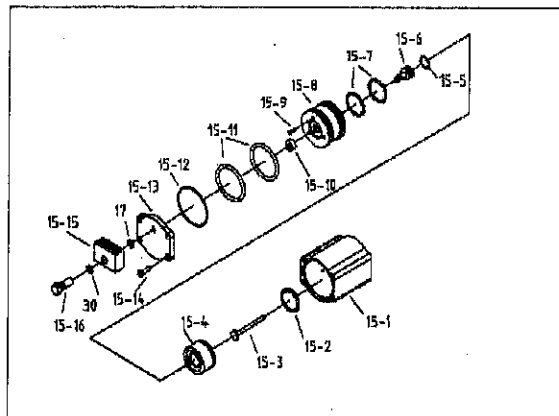
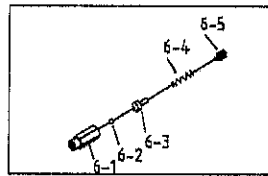


- Onderdelen -
 - Spare parts -
 - Pièces de rechange -
 - Ersatzteile -

471150

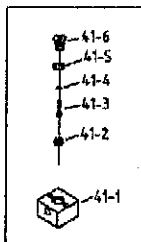

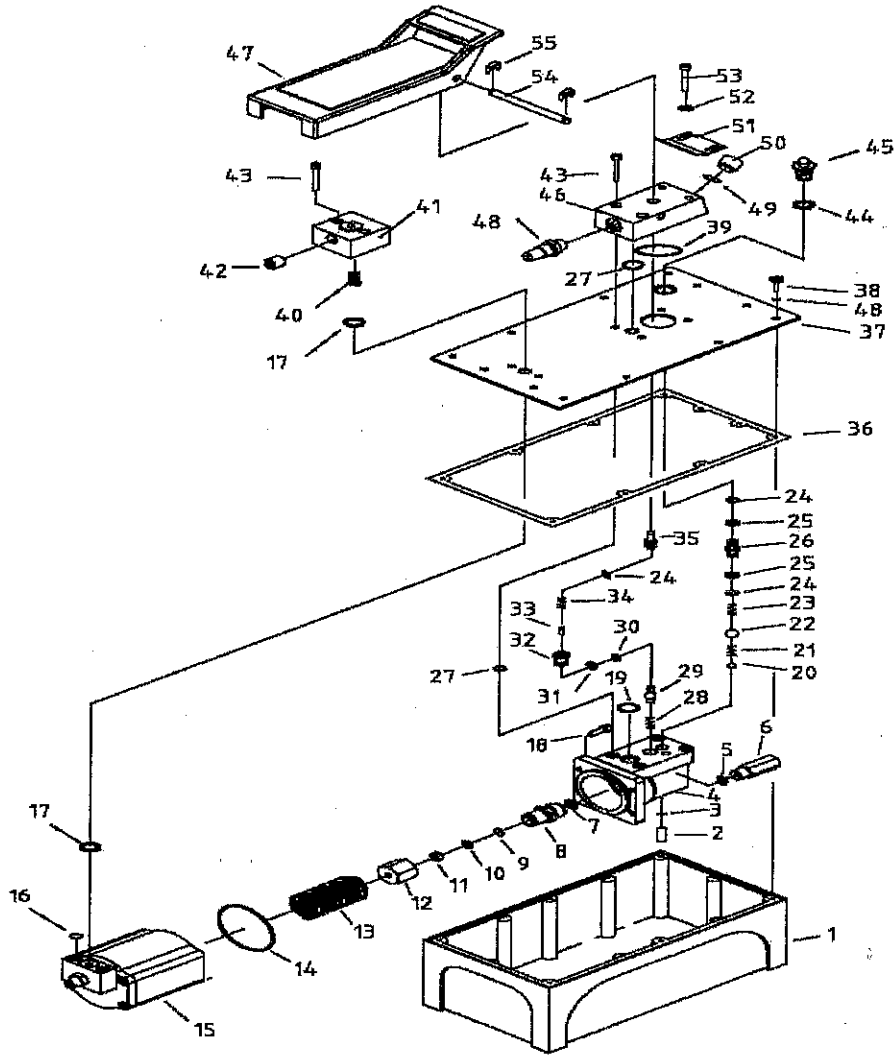

- Onderdelen -
 - Spare parts -
 - Pièces de rechange -
 - Ersatzteile -

Y471150

Pos.	Art. Nummer	Omschrijving	Pos.	Art. Nummer	Omschrijving
1	Y471150-1	oil reservior	46	Y471150-46	valve block
2	Y471150-2	oil filter	47	Y471150-47	foot pedal
3	Y471150-3	copper washer	48	Y471150-48	exhaust muffler
4	Y471150-4	valve block	☆49	Y471150-49	oil filter
5	Y471150-5	copper washer	50	Y471150-50	screw
6	Y471150-6	safty valve	51	Y471150-51	spring plate
7	Y471150-7	copper washer	52	Y471150-52	washer
8	Y471150-8	pump cylinder	53	Y471150-53	bolt
☆9	Y471150-9	y seal	54	Y471150-54	pin
☆10	Y471150-10	nylon gasket	55	Y471150-55	sanp ring
11	Y471150-11	copper washer			
12	Y471150-12	nut	6-1	Y471150-6	safty valve
13	Y471150-13	spring	6-2	Y471150-6-2	steel ball
☆14	Y471150-14	o ring	6-3	Y471150-6-3	ball seat
15	Y471150-15	air pump	6-4	Y471150-6-4	spring
16	Y471150-16	o ring	6-5	Y471150-6-5	screw
☆17	Y471150-17	o ring	15-1	Y471150-15	air pump housing
18	Y471150-18	bolt	*15-2	Y471150-15-2	washer
☆19	Y471150-19	o ring	15-3	Y471150-15-3	pump plunger
20	Y471150-20	steel ball	15-4	Y471150-15-4	air piston base
21	Y471150-21	spring	*15-5	Y471150-15-5	o ring
22	Y471150-22	steel ball	15-6	Y471150-15-6	air shuttle valve
23	Y471150-23	spring	*15-7	Y471150-15-7	o ring
☆24	Y471150-24	o ring	15-8	Y471150-15-8	air shuttle valve
☆25	Y471150-25	nylon gasket	15-9	Y471150-15-9	bolt
26	Y471150-26	coupler	*15-10	Y471150-15-10	shuttle valve seal
☆27	Y471150-27	o ring	*15-11	Y471150-15-11	o ring
28	Y471150-28	spring	*15-12	Y471150-15-12	rear cover
29	Y471150-29	ball seat	15-13	Y471150-15-13	aluminum block
*30	Y471150-30	o ring	15-14	Y471150-15-14	bolt
☆31	Y471150-31	nylon gasket	15-15	Y471150-15-15	fixing base
32	Y471150-32	release valve	15-16	Y471150-15-16	bolt
33	Y471150-33	ball seat			
34	Y471150-34	spring	☆41-1	Y471150-41	air valve
35	Y471150-35	release rod	41-2	Y471150-41-2	seal
36	Y471150-36	seal	41-3	Y471150-41-3	air valve rod
37	Y471150-37	copper washer	☆41-4	Y471150-41-4	o ring
38	Y471150-38	bolt	☆41-5	Y471150-41-5	o ring
☆39	Y471150-39	o ring	41-6	Y471150-41-6	coupler
40	Y471150-40	spring			
41	Y471150-41	air valve	*	Y471150-AMRK	Air motor repair kits
42	Y471150-42	screw	☆	Y471150-PURK	Power unit repair kits
43	Y471150-43	bolt			
☆44	Y471150-44	o ring			
45	Y471150-45	oil filter plug			